

# INSTALLATION INSTRUCTIONS

## LEATHER WHEEL COVER WITH FOAM

### Kit Includes:

Leather Cover Pre-punched with adhesive backed foam pre-cut to size

#### 1. Position Foam around Rim of Wheel

Remove backing material from foam, then apply along outside edge of rim. Note: DO NOT TRIM THE FOAM. The width of the foam appears to be wider than necessary, just push the edges together as you stick the foam onto the wheel. Position foam around rim of wheel. Use your thumb and forefinger to stick the foam edges together. Cut foam to length as necessary.

#### 2. Position Leather over Foam

Note: the leather will be about 1/4" to 1/2" from touching around rim of wheel. Stitching will compress the foam and stretch the leather, so the leather will fit snugly around rim.

#### 3. Follow wheel cover installation instructions. (Attached)

#### 4. Note: Foam will release from rim.

After installing the foam around the wheel rim and you leave the foam unattended for more than 6 hours, the foam will slowly release itself from the rim...**This is OK**...just reapply the foam around the rim by pushing it back down.

**5. Adhesive note:** we use an acrylic adhesive on the foam. If you must remove the adhesive, use an acetone based solvent or a 3M industrial cleaner called "Citrus Cleaner".

#### Other Leather Products:

Spoke covers

Rail covers

Turnbuckle cover

Shackle lanyards

Chafing leather

Internal mast covers

Shroud spreader boots

Bulk Leather + Supplies

Pedestal support cover

Dodger rail cover

Boom gallows cover

## BOAT LEATHER

3050 38th Ave. W., Seattle WA 98199

\*\*\*\*\* (206) 284-9110 \*\*\*\*\*